

# E-UTRAN USER GUIDE

---

Editor:	EURECOM
Deliverable nature:	Public
Due date:	July, 2015
Delivery date:	July, 2015
Version:	0.1
Total number of pages:	26
Reviewed by:	
Keywords:	LTE, eNB, UE, S1AP, GTP

## List Of Authors

Company	Authors
Eurecom	Christian BONNET, Lionel GAUTHIER, Rohit GUPTA, Florian KALTENBERGER, Raymond KNOPP, Navid NIKAIEN, Cedric ROUX.

## Revision History

The following table is a record of the main modifications done to the document since its creation.

Version	Author	Date	Description
1.0	Navid Nikaein	20/07/2015	Initial Draft

## **Executive Summary**

The deliverable presents the eNB, UE developed by EURECOM.

The document presents the deployment scenarios of the E-UTRAN, its configuration, installation and running.

# 1 Introduction

The EURECOM eNB is a bundle of software components that provides the eNB functions of the LTE on both radio interface (i.e. Uu) and core network interfaces (i.e. S1-C and S1-U).

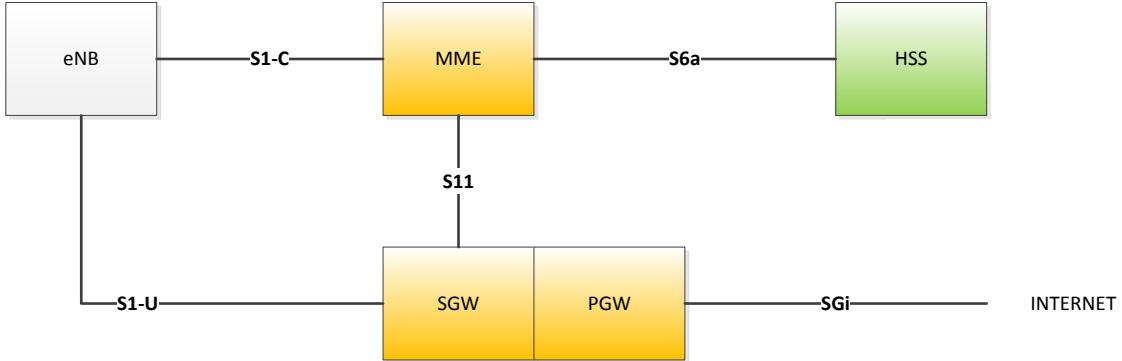


Figure 1 LTE overview

## 1.1 Deployment scenarios

Different deployment scenarios can be considered with the EURECOM eNB and UE as follows [1]:

- Commercial UE <-> OAI eNB + Commercial EPC
- Commercial UE <-> OAI eNB + OAI EPC
- Commercial UE <-> Commercial eNB + OAI EPC
- OAI UE <-> Commercial eNB + OAI EPC (experimental)
- OAI UE <-> Commercial eNB + Commercial EPC (experimental)
- OAI UE <-> OAI eNB + Commercial EPC (experimental)
- OAI UE <-> OAI eNB + OAI EPC
- OAI UE <-> OAI eNB

Below we present few of them.

## 1.2 eNB without S1 interface

In this deployment, S1AP and GTP protocols are bypassed, and thus eNB exchange the IP packets with the upper layer through the OAI network device driver called nasmesh.

To setup a radio link, you require OAI UE with the network device driver and without the NAS protocol.

One example scenario here is LTE-u.

### 1.3 ENB with S1 Interface

In this deployment, eNB is built with the S1AP and GTP protocols and interacts with EPC. Different EPC may be connected to the OAI eNB in addition to the OAI EPC.

Below, we provide few examples with OAI EPC.

#### 1.3.1 eNB with all-in-one OAI EPC platform

The following picture depicts a EURECOM eNB and EPC providing MME and GW functions, and interact with the EURECOM HSS. In this deployment scenario, the S11 interface is virtual in the sense that S11 messages do not go through the network layer but through an inter-task interface message passing middleware (ITTI).


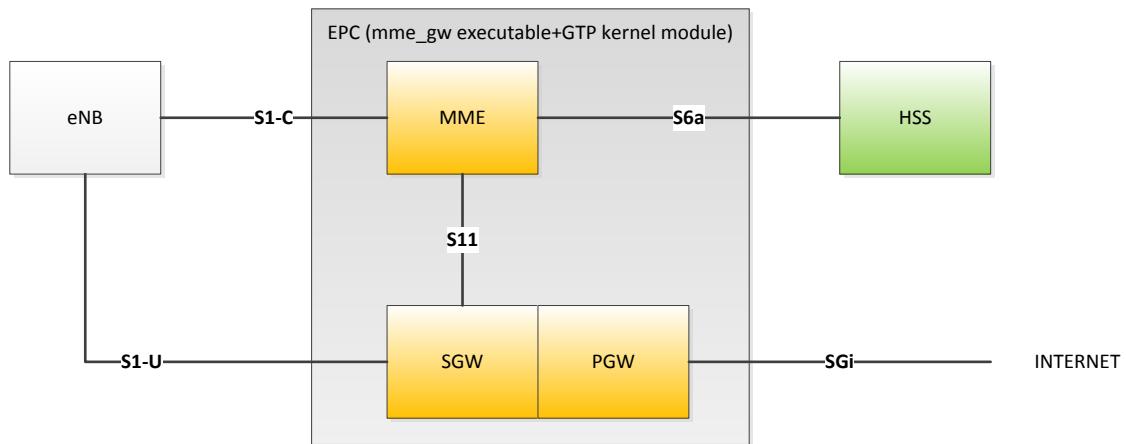


Figure 2 OAI eNB with all-in-one OAI EPC

The EPC can be deployed on the same host as OAI eNB host or on its own host.

#### 1.3.2 eNB with separate EPC platform

Actually this deployment scenario is under development and cannot be demonstrated yet.

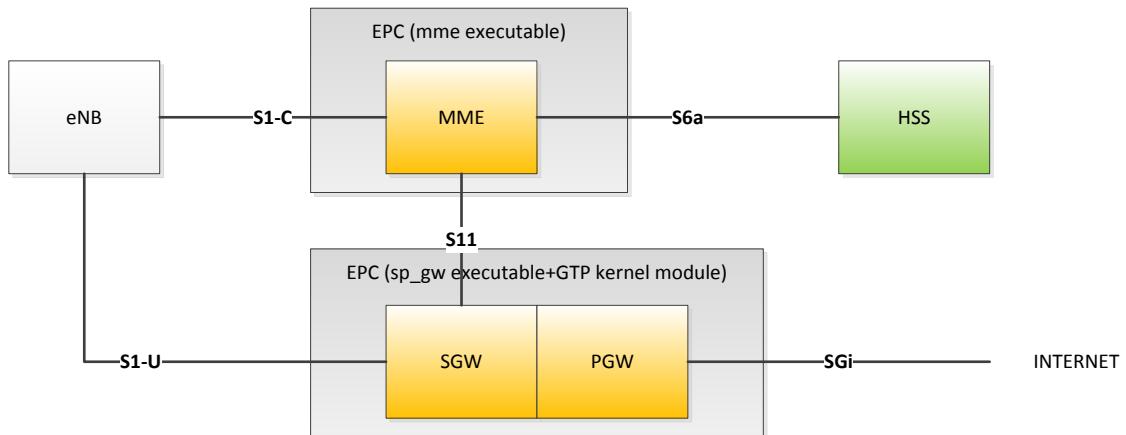

## **1.4 eNB on virtualized environments**

TBC: See [2].

### **1.4.1 Containers (LXC and Dockers)**

### **1.4.2 KVM**

## **2 eNB Installation**

The eNB and UE software have only been tested on UBUNTU 14.04x64, and UBUNTU 14.10x64 LINUX distributions on Intel x86 64 bits platforms, and to less extend on Debian.

In addition, low latency kernel is required. For kernel installation, please refer to [3].

If you want to try another LINUX distribution, it is mandatory to have a 64 bits LINUX distribution.

### **2.1 eNB source code**

The OpenAirInterface software can be obtained from our svn server. You will need an svn client to get the sources (on Ubuntu Linux the client can be install using the command "apt-get install subversion"). The openair4G repository is currently used for main developments. It can be accessed in read-only mode from the URL <http://svn.eurecom.fr/openair4G>. If you have full access to our SVN you should use the URL <http://svn.eurecom.fr/openairsvn/openair4G>.

Depending on what is recommended on the openair mailing list ([openair4g-devel@eurecom.fr](mailto:openair4g-devel@eurecom.fr)), you should use the trunk or the latest release.

If svn is not installed on your computer, execute in a shell the following command:

```
user@host:~ sudo apt-get install subversion
```

Then to retrieve the source code, if you have read-only access, execute in a shell the following command:

```
user@host:~ svn co http://svn.eurecom.fr/openair4G/trunk
```

If you have write access:

```
user@host:~ svn co http://svn.eurecom.fr/openairsvn/openair4G --username mysvnlogin
```

The source code in a release directory or in the trunk directory is organized as follow:

- cmake\_targets : Openair build system (latest)
- common : Common code to all layers
- openair1 : Physical layer source code
- openair2 : Layer 2(MAC, RLC, RRC, PDCP) source code
- openair3 : Middleware code (mainly unused).
- openair-cn : Core network protocols source code.
- targets : Specific code for executables (may contains unsupported old build system).

Important!

- In this document OPENAIR\_DIR is the path to the openair working directory (may be trunk or rel\_x.y\_dd.mm.yyyy).
- OAI is now migrating to git, so please stay tuned to [3] for updates.

## 2.2 eNB additional software

Some software installations have to be done prior to build the EURECOM eNB/UE.

In OPENAIR\_DIR/cmake\_targets directory, execute the following command:

```
user@host:~/openair4G/trunk/cmake_targets$ ./build_oai -I
```

Optionaly add: --install-optional-packages --install-system-files

This command will update the software source list of your Ubuntu installation. It will install miscellaneous software packages.

## 2.3 eNB configuration

OpenAirInterface (OAI) offers configuration files for facilitating the determination of the parameters for each component.

The top level parameters configuration for multiple eNBs is divided in 6 main sections:<sup>1</sup>

- **Main parameters:** Configuration of the base station ID, tracking area code (TAC), and mobile country code (MCC) and mobile network code (MNC).
- **PHY parameters:** Configuration of the physical layer parameters (i.e., frequency, power control, tx/rx number of antennae, tx/rx gain, hopping etc.)

---


<sup>1</sup> An example of eNB config file is located at:

<https://svn.eurecom.fr/openair4G/trunk/targets/PROJECTS/GENERIC-LTE-EPC/CONF/enb.band7.exmimo2.conf>

- **SRB parameters:** Configuration of special radio bearers parameters (i.e., poll retransmission timer, reordering timer etc.)
- **MME parameters:** Configuration of MME parameters (i.e., IPv4/IPv6 addressing etc.)
- **Network interfaces:** Configuration of network interfaces (i.e., eNB S1-U IPv4 address, eNB S1-MME IPv4 address etc.)
- **log config:** Configuration of logger's level and verbosity by taking into account all the layers and components of network (i.e., PHY, MAC, RLC, PDCP, HW etc.)

A detailed description of the parameters that are configured is given in **Error! Reference source not found.** (eNB configuration content).<sup>2</sup>

Figure 3 shows the view of the build process of OAI eNB, and how configuration and binary files are generated

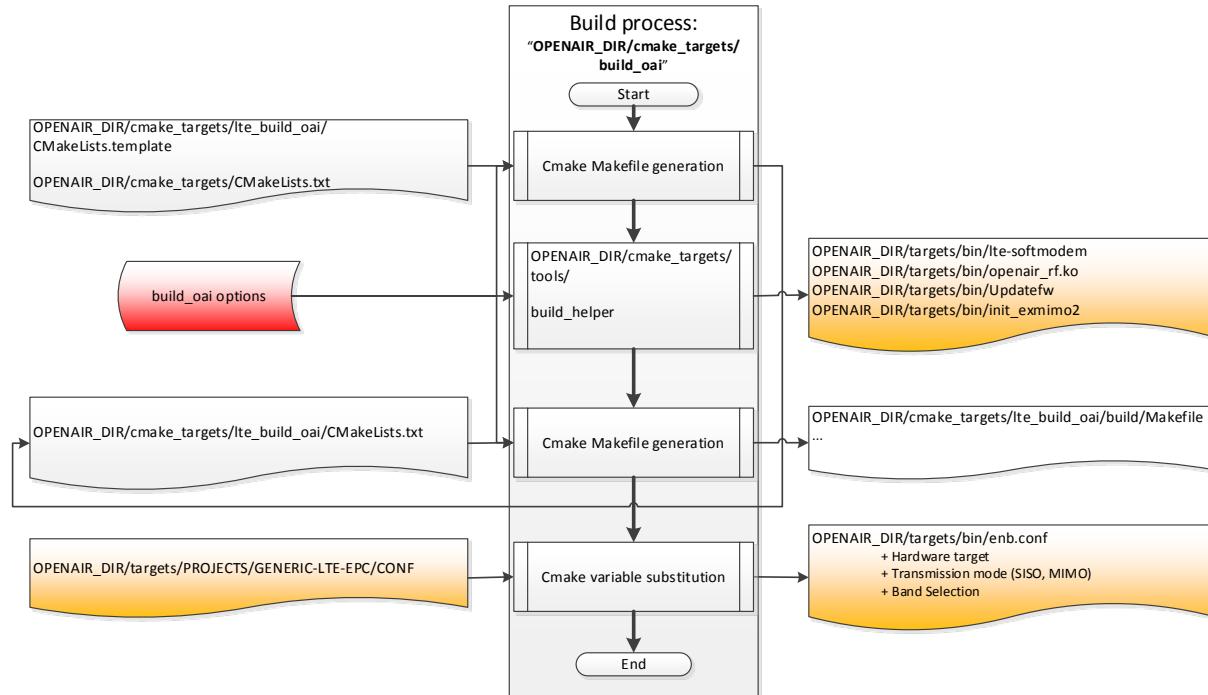

**Figure 3 OAI eNB build process and configuration**

Inputs files and parameters are on the left part of the figure, the build process is in the center part and output configuration files are on the right side of the figure.

eNB configuration file contents are detailed in Appendix A.

Configuration files have to be filled prior to compilation.

<sup>2</sup> The type and the declaration of the parameters as variables can be found in the corresponding C file:

[https://svn.eurecom.fr/openair4G/trunk/openair2/ENB\\_APP/enb\\_config.c](https://svn.eurecom.fr/openair4G/trunk/openair2/ENB_APP/enb_config.c)

## 2.4 eNB build and Run

open a shell, and run

- user@host:~/openair4G/trunk/cmake\_targets\$ ./build\_oai -h

Different targets are available as follows:

### 2.4.1 EXMIMO Target

To build:

- user@host:~/openair4G/trunk/cmake\_targets\$ ./build\_oai -g -eNB -X

To run:

- user@host:~/openair4G/trunk/targets/bin\$ ./init\_exmimo2
- user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./lte-softmodem.Rel10 -O ..../PROJECTS/GENERIC-LTE-EPC/CONF/enb.band7.tm1.exmimo2.conf -S -d

for Help

- user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./lte-softmodem.Rel10 -h

### 2.4.2 USRP Target

To build:

- user@host:~/openair4G/trunk/cmake\_targets\$ ./build\_oai -g -eNB -X -w USRP

To run :

- user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./lte-softmodem.Rel10 -O ..../PROJECTS/GENERIC-LTE-EPC/CONF/enb.band7.tm1.usrp210.conf -S -d

for Help:

- user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./lte-softmodem.Rel10 -h

## 2.5 UE build and Run

### 2.5.1 EXMIMO

To build:

- user@host:~/openair4G/trunk/cmake\_targets\$ ./build\_oai -g -UE -X

To run:

- user@host:~/openair4G/trunk/targets/bin\$ ./init\_exmimo2

- user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./lte-softmodem.Rel10 -U -C 26800000000 -r25 --ue-scan-carrier -g7 -d

### 2.5.2 USRP

To build:

- user@host:~/openair4G/trunk/cmake\_targets\$ ./build\_oai -g -UE -X -w USRP

To run:

- user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./lte-softmodem.Rel10 -U -C 26800000000 -r25 --ue-scan-carrier -g7 -d

## 2.6 OAISIM build and Run

To build:

- user@host:~/openair4G/trunk/cmake\_targets\$ ./build\_oai -g --oaisim

to Run:

- With local S1: user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./oaisim.Rel10 -O ..../PROJECTS/GENERIC-LTE-EPC/CONF/enb.band7.generic.oaisim.local\_mme.conf
- Without S1: user@host:~/openair4G/trunk/targets/bin\$ sudo -E ./oaisim.Rel10 -O ..../PROJECTS/GENERIC-LTE-EPC/CONF/enb.band7.generic.oaisim.local\_no\_mme.conf

## 2.7 Test OAI

user@host:~/openair4G/trunk/cmake\_targets\$ ./build\_oai -s

## 3 eNB Monitoring tools

OAI provides monitoring tools such as network protocol analyzers, loggers, performance profilers, timing analyzers and command line interfaces for performing the intended measurements and monitoring the network. Specifically, the supported monitoring tools are:

- OAI Soft Scope and Status can be read remotely.
- Wireshark / PCAP Interface:
  - L2/L3 and S1 interface.
  - Localhost or remote host access.
  - Example can be found at :
- OAI Logger and dissector (called itti\_analyzer):
  - Remote log file retrieval
- OpenAirInterface performance profiler: for processing time measurement.
- OpenAirInterface timing analyzer: build the VCD

- Convert the ascii variables and function calls output to vcd format (value change data) allowing to view the temporal function and variable changes in a vcd viewer, such as gtkwave.
- OAI message sequence chart (MSC) : <http://www.mcternan.me.uk/mscgen/>.
- CLI interface.

The figures below depict the provided monitoring tools and their functionality via typical measurement and packet capture examples. In addition, MSC examples are illustrated.

OAI Soft Scope provides plots for received signal power, channel impulse response, channel frequency response, LLRs, throughput and I/Q components (e.g., 4-QAM constellation). This tool offers a complete overview of the PHY layer characteristics, an example is shown in Figure 4.

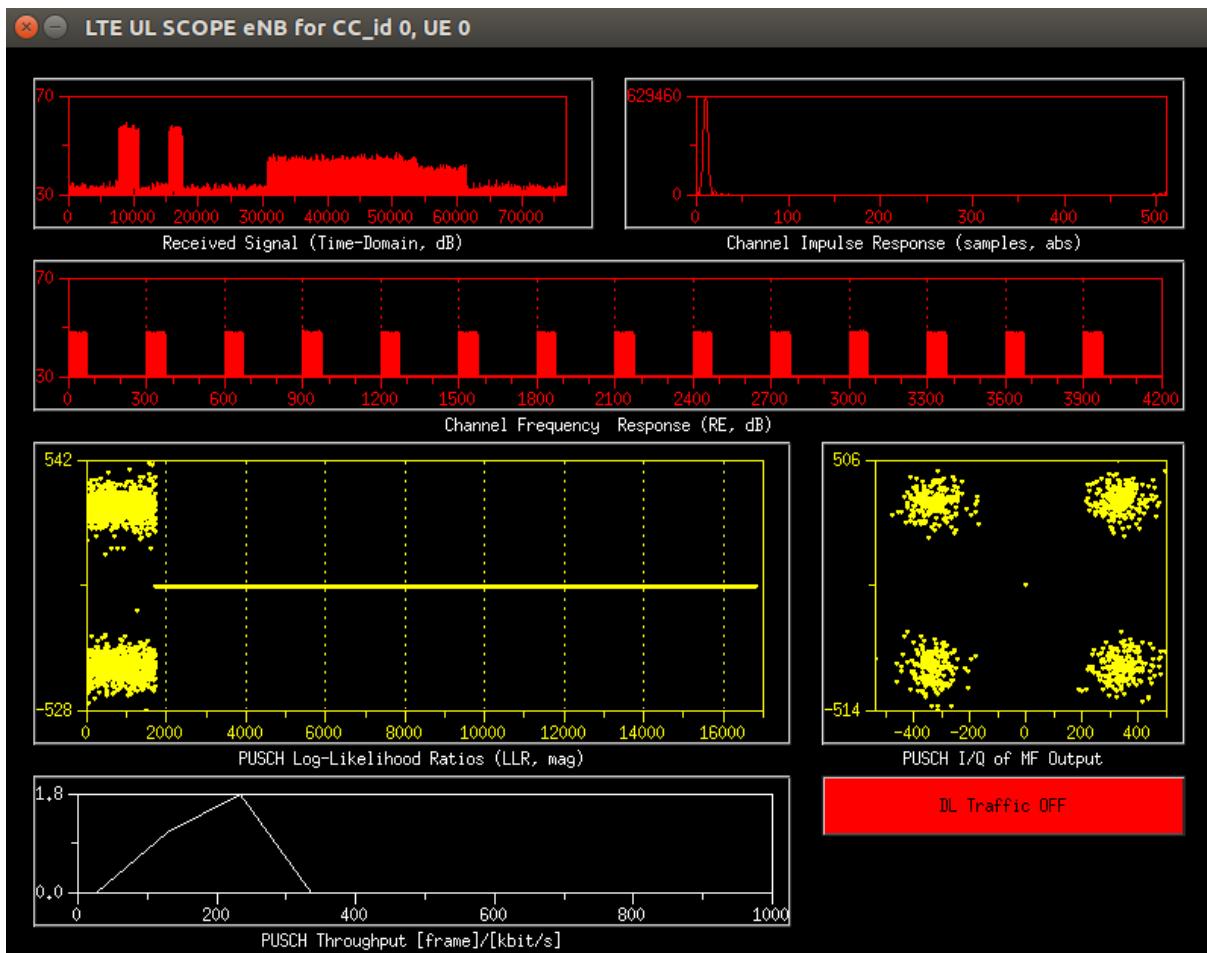


Figure 4: OAI Soft Scope: Received Signal, Channel Impulse Response, LLRs, I/Q and Throughput plots

Wireshark is a powerful tool widely used for capturing packets, offering integrated sorting and filtering options. In addition to layer 3 protocol dissection, OpenAirInterface implements the Wireshark interface for the layer 2 protocol dissection for PDCP, RLC, and MAC layer<sup>3</sup>. In Figure 5, an example illustrates RRConnectionReconfiguration message capture using Wireshark.

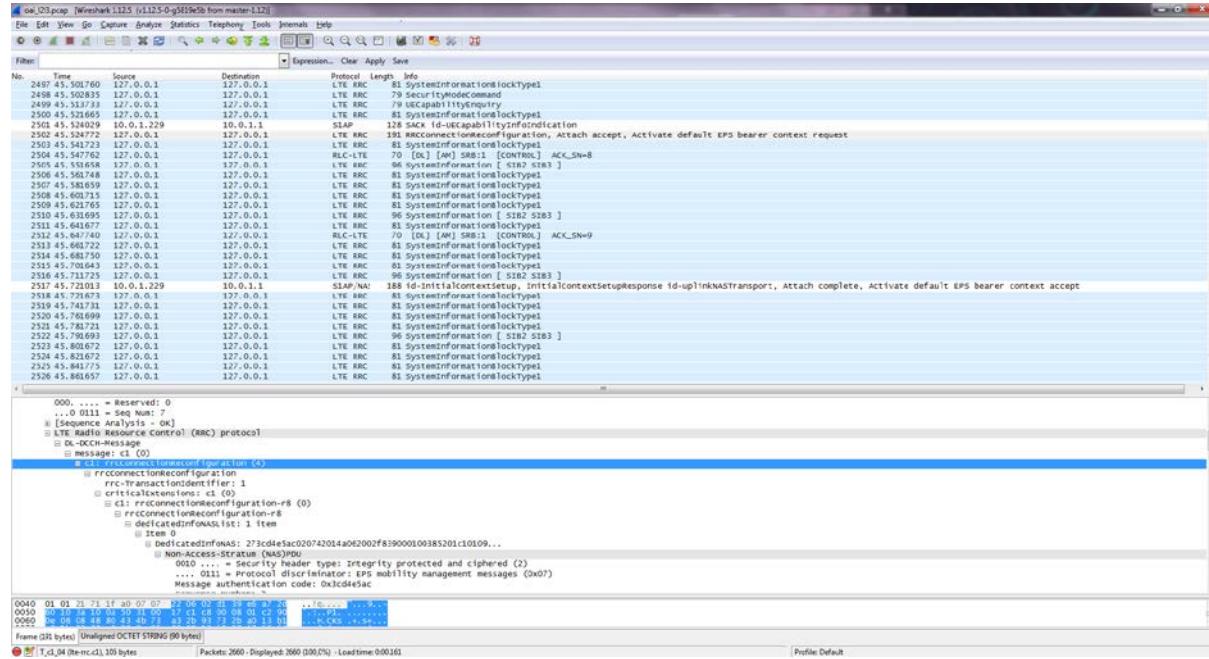


Figure 5: Wireshark: RRConnectionReconfiguration message capture

The itti\_analyzer tool can be used to analyze the exchanges between RRC<->S1AP, RRC<->PDCP, PDCP<->S1. In addition to the protocol information, the itti\_analyzer analyses all the messages exchanged between different protocols. It allows message filtering on per time, channel (CCCH, DCCH, DTCH), sender, and receiver basis allowing to monitor and follow the protocol functionalities. Figure 6 depicts an example for RRConnectionReconfiguration message capture using the itti\_analyzer.

<sup>3</sup> Example of the pcap file can be found at:

[https://twiki.eurecom.fr/twiki/pub/OpenAirInterface/IttiAnalyzer/oai\\_123.pcap](https://twiki.eurecom.fr/twiki/pub/OpenAirInterface/IttiAnalyzer/oai_123.pcap). To view the messages, you need to enable UDP heuristics in the protocol preferences of Wireshark.

MN	LTE Time	Message	From	To	Ins	Content
1588	0.15	STAP_DOWNLINK_NAS	TASK_STAP	TASK_RRC_ENB	0	.ittiMsg = msg_t, msg_s   .rrc_DL_dch = IttiMsgText,
1590	0.15	RRC_DL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	<DL-DCCH-Message>
1591	0.15	RRC_DCCH_DATA_IND	TASK_RRC_ENB	TASK_PDCP_ENB	0	<message>
1594	0.17	RRC_DCCH_DATA_IND	TASK_PDCP_ENB	TASK_RRC_ENB	0	<c1>
1596	0.17	RRC_UL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	<rrcConnectionReconfiguration>
1597	0.17	STAP_UPLINK_NAS	TASK_RRC_ENB	TASK_S1AP	0	<rrc-TransactionIdentifier>=0</rrc-TransactionIdentifier>
1598	0.17	STAP_UPLINK_NAS_LOG	TASK_S1AP	TASK_UNKNOWN	DEF	<criticalExtensions>
1599	0.17	SCTP_DATA_REQ	TASK_S1AP	TASK_SCTP	0	<c1>
1606	0.13	SCTP_DATA_IND	TASK_SCTP	TASK_S1AP	DEF	<rrcConnectionReconfiguration-r8>
1608	0.13	STAP_INITIAL_CONTEXT_SETUP_LOG	TASK_S1AP	TASK_UNKNOWN	DEF	<dedicatedInfoNASList>
1609	0.13	STAP_INITIAL_CONTEXT_SETUP_REQ	TASK_S1AP	TASK_RRC_ENB	0	<DedicatedInfoNAS>
1611	0.13	GTPV1U_ENB_CREATE_TUNNEL_REQ	TASK_S1AP	TASK_GTPV1_U	0	27 9E 00 C2 92 02 87 42 02 4A 06 20 02 F8 29 00
1613	0.13	GTPV1U_ENB_CREATE_TUNNEL_RESP	TASK_GTPV1_U	TASK_RRC_ENB	0	01 00 31 52 01 C1 01 09 00 6F 70 65 72 61 74
1615	0.13	RRC_DL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	6F 72 05 01 C0 AC 00 02 5E 04 FE FE 9E 00 27 14
1617	0.13	RRC_DCCH_DATA_REQ	TASK_RRC_ENB	TASK_PDCP_ENB	0	80 80 21 10 02 00 00 10 81 06 C0 AB 0C 64 83 06
1626	0.11	RRC_DCCH_DATA_IND	TASK_PDCP_ENB	TASK_RRC_ENB	0	C0 AB 0C 64 50 0B F6 02 FB 29 80 00 01 00 00 01
1628	0.11	RRC_UL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	20 17 2C
1630	0.11	RRC_DL_CCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	</DedicatedInfoNASList>
1632	0.11	RRC_DCCH_DATA_REQ	TASK_RRC_ENB	TASK_PDCP_ENB	0	<radioResourceConfigDedicated>
1636	0.15	RRC_DCCH_DATA_IND	TASK_PDCP_ENB	TASK_RRC_ENB	0	<drb-ToAddModList>
1638	0.15	RRC_UL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	<DRB-Config>
1640	0.15	S1AP_UE_CAPABILITIES_IND	TASK_RRC_ENB	TASK_S1AP	0	<eps-BearerIdentity>5</eps-BearerIdentity>
1641	0.15	STAP_UPLINK_NAS_LOG	TASK_S1AP	TASK_UNKNOWN	DEF	<drb-Identity>1</drb-Identity>
1642	0.15	SCTP_DATA_REQ	TASK_S1AP	TASK_SCTP	0	<pdcp-Config>
1643	0.15	RRC_DL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	<discardTimer><infinity></discardTimer>
1646	0.15	RRC_DCCH_DATA_REQ	TASK_RRC_ENB	TASK_PDCP_ENB	0	<rlc-UM>
1651	0.11	RRC_DCCH_DATA_IND	TASK_PDCP_ENB	TASK_RRC_ENB	0	<pdcp-SN-Size><len12bits></pdcp-SN-Size>
1653	0.11	RRC_UL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	<rlc-UM>
1660	0.11	STAP_INITIAL_CONTEXT_SETUP_RESP	TASK_RRC_ENB	TASK_S1AP	0	<headerCompression>
1661	0.11	STAP_INITIAL_CONTEXT_SETUP_LOG	TASK_S1AP	TASK_UNKNOWN	DEF	<notUsed></notUsed>
1662	0.11	SCTP_DATA_REQ	TASK_S1AP	TASK_SCTP	0	</headerCompression>
1669	0.13	RRC_DCCH_DATA_IND	TASK_PDCP_ENB	TASK_RRC_ENB	0	</pdcp-Config>
1671	0.13	RRC_DL_DCCH	TASK_RRC_ENB	TASK_UNKNOWN	0	<rlc-Config>
1672	0.13	STAP_UPLINK_NAS	TASK_RRC_ENB	TASK_S1AP	0	<um-B1-Directional>
1673	0.13	STAP_UPLINK_NAS_LOG	TASK_S1AP	TASK_UNKNOWN	DEF	<ul-UM-RLC>
1674	0.13	SCTP_DATA_REQ	TASK_S1AP	TASK_SCTP	0	<s-n-FieldLength><size10></s-n-FieldLength>

Figure 6: ITTI analyser: RRCConnectionReconfiguration message capture

OAI provides a logger exploited for code testing, debugging, checking protocols functionality and storing messages information. The OAI logger can be configured in the eNB configuration file. The logs have the following format:

[COMP][LOG LEVEL][FUNC][ID][FRAME NUM][CONTENT] as described below:

- COMP: represents the log component and can be S1AP, GTP, RRC, PDCP, RLC, MAC, PHY.
- LOG LEVEL: represents the level and verbosity of the logs, and can have the following values: Emerge, Alert, Critic, Error, War, Notice, Info, Debug, Trace.
- FUNC: represents the name of the function inside which the log is called (This is an optional block).
- ID: represents the eNB Identifier.
- FRAME NUM: represents the frame counter.
- CONTENT: shows the content of the log message.

Figure 7 shows an instance of messages exchange that is stored in OAI logger. This information is used for further study by the experimenters and code analysis/debugging for the developers.

```

</BandInfoEUTRA>
<BandInfoEUTRA>
  <InterFreqBandList>
    <InterFreqBandInfo>
      <interFreqNeedForGaps><true/></interFreqNeedForGaps>
    </InterFreqBandInfo>
    <InterFreqBandInfo>
      <interFreqNeedForGaps><true/></interFreqNeedForGaps>
    </InterFreqBandInfo>
    <InterFreqBandInfo>
      <interFreqNeedForGaps><true/></interFreqNeedForGaps>
    </InterFreqBandInfo>
  </InterFreqBandList>
</BandInfoEUTRA>
</bandListsEUTRA>
</measParameters>
<featureGroupIndicators>
  010111000001011101100010000000
</featureGroupIndicators>
<interRAT-Parameters>
</interRAT-Parameters>
</UE-EUTRA-Capability>
[RRC][1]RRCConnectionReconfiguration Encoded 813 bits (102 bytes)
[RRC][1][eNB 0] Frame 2178, Logical Channel DL-DCCH, Generate RRCConnectionReconfiguration (bytes 102, UE id c7b4)
[SCTP][1][sctp_send_data] Successfully sent 45 bytes on stream 1 for assoc_id 40
[RLC][1][FRAME 02178][eNB][MOD 00][RNTI c7b4][SRB AM 01] RLC_AM_DATA_REQ size 107 Bytes, NB SDU 1 current_sdu_index=6 next_sdu_index=7 conf 0 mui 2
[RRC][N][eNB 0] Frame 132: received a DCCH 1 message on SRB 0 with Size 2 from UE c7b4
[RRC][1][FRAME 02180][eNB][MOD 00][RNTI c7b4] Received on DCCH 1 RRC_DCCH_DATA_IND
[RLC][1][FRAME 02180][eNB][MOD 00][RNTI c7b4] [DRB 1] rrc_rlc_add_rlu DRB
[RRC][1][eNB 0] Frame 2180 : Logical Channel UL-DCCH, Received RRCConnectionReconfigurationComplete from UE rnti c7b4, reconfiguring DRB 1/LCID 3
[RRC][1][eNB 0] Frame 2180 : Logical Channel UL-DCCH, Received RRCConnectionReconfigurationComplete from UE 0, reconfiguring DRB 1/LCID 3
[MAC][1][rrc_mac_config_req] [CONFIG][eNB 0/0] Configuring MAC/PHY for UE 0 (c7b4)

```

Figure 7: OAI logger: RRCConnectionReconfigurationComplete reception

OAI offers online statistics for the status of the network (e.g., successful transmissions, errors per HARQ per round, average throughput etc.). Figure 8 depicts the ULSCH/DLSCH errors per HARQ process (8 in LTE FDD) per round (4 is maximum). The provided statistics can be used in experimental measurements for performance evaluation of the system.



OAIE uses MSC for representing network entities/interfaces and their interactions in a diagrammatic form. Arrows direction defines the sender/receiver and explanatory comments are included. The examples in Figure 10 and Figure 11 show an instance of E\_UTRAN and EPC messages exchange, respectively.

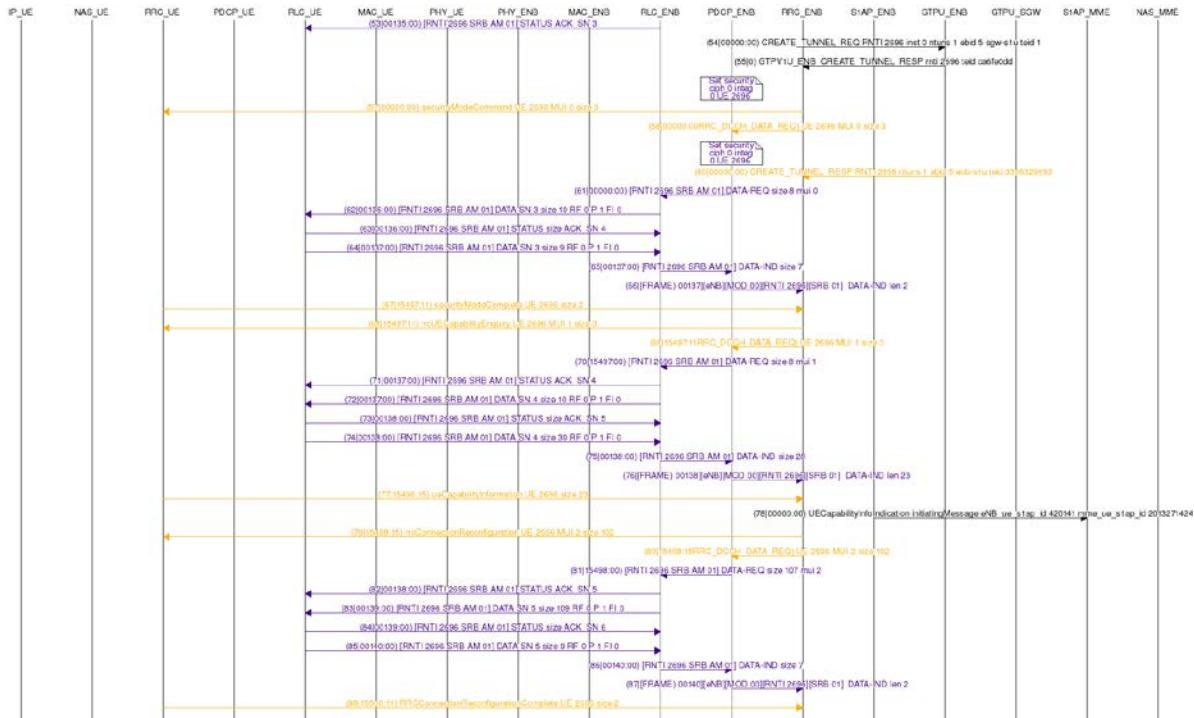


Figure 10: MSC for E\_UTRAN messages (e.g., UE Capability Enquiry, UE Capability Information, RRC Connection Reconfiguration, RRC Connection Reconfiguration Complete etc.)

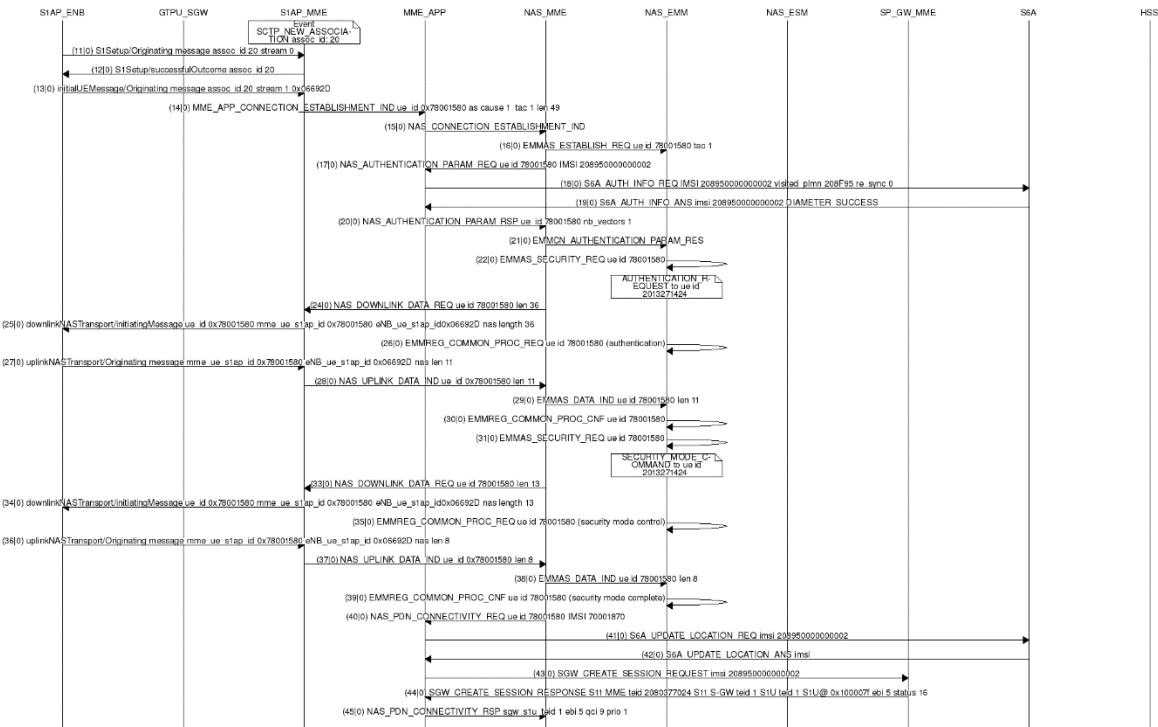


Figure 11: MSC for EPC messages (e.g., S1AP Initial UE Message [Attach Request + PDN Connectivity Request], Update location Request etc.)

## 4 References

- [1] Nikaein, Navid; Knopp, Raymond; Kaltenberger, Florian; Gauthier, Lionel; Bonnet, Christian; Nussbaum, Dominique; Ghaddab, Riadh, “OpenAirInterface: an open LTE network in a PC”, url: <http://www.eurecom.fr/publication/4371>
- [2] Nikaein, Navid; Knopp, Raymond; Gauthier, Lionel; Schiller, Eryk; Braun, Torsten; Pichon, Dominique; Bonnet, Christian; Kaltenberger, Florian; Nussbaum, Dominique , “Closer to cloud-RAN: RAN as a service”, url: <http://www.eurecom.fr/publication/4632>
- [3] OpenAirInterface Twiki, URL: <https://twiki.eurecom.fr/twiki/bin/view/OpenAirInterface>
- [4] OpenAirInterface SVN repository: <https://svn.eurecom.fr/openair4G/trunk/>

## Annex A eNB configuration

The eNB configuration parameters are presented here. All the parameters are divided in the following 6 main sections:

### A.1 Main section

Parameter	Type	
<b>real_time</b>	String	Real time compilation
<b>eNB_ID</b>	Integer	eNB identifier
<b>cell_type</b>	String	Type of the cell
<b>eNB_name</b>	String	Name of eNB
<b>tracking_area_co</b>	String	Tracking area code (TAC)
<b>de</b>		
<b>mobile_country_code</b>	String	Mobile country code (MCC)
<b>mobile_network_code</b>	String	Mobile network code (MNC)

Table 1 eNB configuration main section

### A.2 Physical parameters section

Parameter	Type	
<b>frame_type</b>	String	Type of the frame (e.g., FDD,TDD)
<b>tdd_config</b>	Integer	
<b>timer_status_prohibit</b>	Integer	
<b>tdd_config_s</b>	Integer	
<b>prefix_type</b>	String	Cyclic prefix
<b>eutra_band</b>	Integer	EUTRA band (e.g., 7, 13)
<b>downlink_frequency</b>	Double	Downlink frequency

<b>uplink_frequency_offset</b>	Integer	Uplink frequency offset
<b>Nid_cell</b>	Integer	Physical layer cell identity
<b>N_RB_DL</b>	Integer	Number of resource blocks (RBs) in Downlink
<b>Nid_cell_mbsfn</b>	Integer	
<b>nb_antennas_tx</b>	Integer	Number of Tx antennae
<b>nb_antennas_rx</b>	Integer	Number of Rx antennae
<b>tx_gain</b>	Integer	Tx gain
<b>rx_gain</b>	Integer	Rx gain
<b>prach_root</b>	Integer	
<b>prach_config_index</b>	Integer	Parameter that defines exactly when UE should send RACH in frequency/time grids (Details TS36.211 Table 5.7.1-2)
<b>prach_high_speed</b>	String	
<b>prach_zero_correlation</b>	Integer	The zero correlation zone is used to guarantee orthogonality of generated sequences. The value depends on particular condition in the cell
<b>prach_freq_offset</b>	Integer	With this information, cell informs UE and other neighbor cells know about which PRB is available for RACH access
<b>pucch_delta_shift</b>	Integer	
<b>pucch_nRB_CQI</b>	Integer	Number of resource blocks for channel quality indicator (CQI) periodic reporting
<b>pucch_nCS_AN</b>	Integer	Cyclic shift used for PUCCH1
<b>pucch_n1_AN</b>	Integer	PUCCH to be used for HARQ (Rel 10)
<b>pdsch_referenceSignalPower</b>	Integer	This defines the energy per resource element for the reference signal using a range from -60 to 50 dBm
<b>pdsch_p_b</b>	Integer	It is used to calculate the power difference between

		PDSCH and Reference Signal. Value is from 0 to 3
<b>pusch_n_SB</b>	Integer	Number of subbands (range 1 to 4)
<b>pusch_enable64QAM</b>	String	64QAM (enable/disable)
<b>pusch_hoppingMode</b>	String	Hopping mode can be inter-subframe, intra or inter-subframe
<b>pusch_hoppingOffset</b>	Integer	Offset values range from 1 to 98
<b>pusch_groupHoppingEnabled</b>	String	Group hopping (enable/disable)
<b>pusch_groupAssignment</b>	Integer	Parameter that gives sequence shift pattern for group hopping (0 to 29)
<b>pusch_sequenceHoppingEnabled</b>	String	Sequence hopping (enable/disable)
<b>pusch_nDMRS1</b>	Integer	
<b>phich_duration</b>	String	
<b>phich_resource</b>	String	
<b>srs_enable</b>	String	
<b>pusch_p0_Nominal</b>	Integer	Impacts the calculation of PUSCH transmit power and applicable to non-persistent scheduling only (-126 to 24 dBm)
<b>pusch_alpha</b>	String	Impacts the calculation of PUSCH transmit power and also scales the contribution of path loss. Possible values are 0, 0.4, 0.5, 0.6, 0.7, 0.8, 0.9 and 1
<b>pucch_p0_Nominal</b>	Integer	Impacts the calculation of PUSCH transmit power and applicable to non-persistent scheduling only (-126 to 24 dBm)
<b>msg3_delta_Preamble</b>	Integer	Impacts the transmit power of PUSCH when responding to random access response grant (-1 to 6dB)
<b>pucch_deltaF_Format1</b>	String	Uplink power control parameter
<b>pucch_deltaF_Format1b</b>	String	Idem above

<b>pucch_deltaF_Format2</b>	String	Idem above
<b>pucch_deltaF_Format2a</b>	String	Idem above
<b>pucch_deltaF_Format2b</b>	String	Idem above
<b>rach_numberOfRA_Preambles</b>	Integer	Total number of random access preambles available for contention based random access. Since there are maximum 64 preambles sequences available, others could be reserved by eNB for Non-Contention based random access. Range of this parameter is 4 to 64
<b>rach_preamblesGroupAConfig</b>	String	
<b>rach_powerRampingStep</b>	Integer	Power ramping step size with possible values of 0, 2, 4 or 6 dB
<b>rach_preambleInitialReceivedTargetPower</b>	Integer	Preamble initial received target power with values from -120 dBm to -90 dBm with step size of 2 dBm
<b>rach_preambleTransMax</b>	Integer	Maximum number of pREAMBLE transmissions. Possible values are 3, 4, 5, 6, 7, 8, 10, 20, 50, 100, 200
<b>rach_raResponseWindowSize</b>	Integer	Duration of RA response window. RA response window size is in unit of subframes (2, 3, 4, 5, 6, 7, 8, or 10 subframes)
<b>rach_macContentionResolutionTimer</b>	Integer	Mac contention resolution timer in unit of subframes
<b>rach_maxHARQ_Msg3Tx</b>	Integer	Maximum number of HARQ retransmissions for message 3 of RACH process (contention-based Random access) with possible values from 1 to 8 in step of 1
<b>pcch_default_PagingCycle</b>	Integer	The default DRX cycle in idle mode in unit of radio frames
<b>pcch_nB</b>	String	Parameter used in finding the actual paging frames and paging occasions in RRC idle mode
<b>bcch_modificationPeriodCoeff</b>	Integer	The value {2,4,6,8} of this parameter is multiplied with default DRX cycle (e.g., 320ms, 640ms) to generate the BCCH modification period

<b>ue_TimersAndConstants_t300</b>	Integer	Starts at the RRC Connection REQ transmit
<b>ue_TimersAndConstants_t301</b>	Integer	Starts at the RRC Connection Re-establishment REQUEST
<b>ue_TimersAndConstants_t310</b>	Integer	Starts when UE detects PHY layer related problems (when it receives N310 consecutive out-of-sync INDs from lower layers)
<b>ue_TimersAndConstants_t311</b>	Integer	Starts while initiating Connection Re-establishment procedure

**Table 2 eNB configuration subsection SRB1 parameters**

### A.3 SRB1 parameters section

Parameter	Type	
<b>timer_poll_retra</b>	Integer	Timer for poll retransmission
<b>nsmi</b>		
<b>timer_reorderin</b>	Integer	RLC AM reordering timer
<b>g</b>		
<b>timer_status_pro</b>	Integer	
<b>hibit</b>		
<b>poll_pdu</b>	Integer	
<b>poll_byte</b>	Integer	
<b>max_retx_thresh</b>	Integer	
<b>old</b>		

**Table 3 eNB configuration subsection SRB1 parameters**

### A.4 MME parameters section

Parameter	Type	
<b>ipv4</b>	String	IPv4 address
<b>ipv6</b>	String	IPv6 address

<b>active</b>	String	Activation (yes/no)
<b>preference</b>	String	IPv4 or IPv6

**Table 4 eNB configuration subsection MME parameters**

#### A.5 Network interfaces section

Parameter	Type	
<b>ENB_INTERFACE_NAME_FOR_S1_M</b>	String	Interface name for S1-MME (e.g., eth1)
<b>MME</b>		
<b>ENB_IPV4_ADDRESS_FOR_S1U</b>	String	eNB IPv4 subnet for S1-MME
<b>ME</b>		
<b>ENB_INTERFACE_NAME_FOR_S1U</b>	String	Interface name for S1-U (e.g., eth1)
<b>U</b>		
<b>ENB_IPV4_ADDRESS_FOR_S1U</b>	String	eNB IPv4 subnet for S1-U
<b>ENB_PORT_FOR_S1U</b>	String	eNB port for S1-U

**Table 5 eNB configuration subsection Network interfaces**

#### A.6 Log config

Parameter	Type	
<b>global_log_level</b>	String	Global logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>global_log_verbosity</b>	String	Global logger verbosity level (e.g., none, low, medium, high, full)
<b>hw_log_level</b>	String	HW logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>hw_log_verbosity</b>	String	HW logger verbosity level (e.g., none, low, medium, high, full)
<b>phy_log_level</b>	String	PHY logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>phy_log_verbosity</b>	String	PHY logger verbosity level (e.g., none, low, medium, high, full)

<b>mac_log_level</b>	String	MAC logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>mac_log_verbosity</b>	String	MAC logger verbosity level (e.g., none, low, medium, high, full)
<b>rlc_log_level</b>	String	RLC logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>rlc_log_verbosity</b>	String	RLC logger verbosity level (e.g., none, low, medium, high, full)
<b>pdcp_log_level</b>	String	PDCP logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>pdcp_log_verbosity</b>	String	PDCP logger verbosity level (e.g., none, low, medium, high, full)
<b>rrc_log_level</b>	String	RRC logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>rrc_log_verbosity</b>	String	RRC logger verbosity level (e.g., none, low, medium, high, full)
<b>gtpu_log_level</b>	String	GTPU logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>gtpu_log_verbosity</b>	String	GTPU logger verbosity level (e.g., none, low, medium, high, full)
<b>udp_log_level</b>	String	UDP logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>udp_log_verbosity</b>	String	UDP logger verbosity level (e.g., none, low, medium, high, full)
<b>osa_log_level</b>	String	OSA logger level (e.g., emerg, alert, crit, error, warn, notice, info, debug, trace)
<b>osa_log_verbosity</b>	String	OSA logger verbosity level (e.g., none, low, medium, high, full)

Table 6 eNB configuration subsection Log config